


MECHANICAL FLOOR PLAN

1
1/4" = 1'-0"

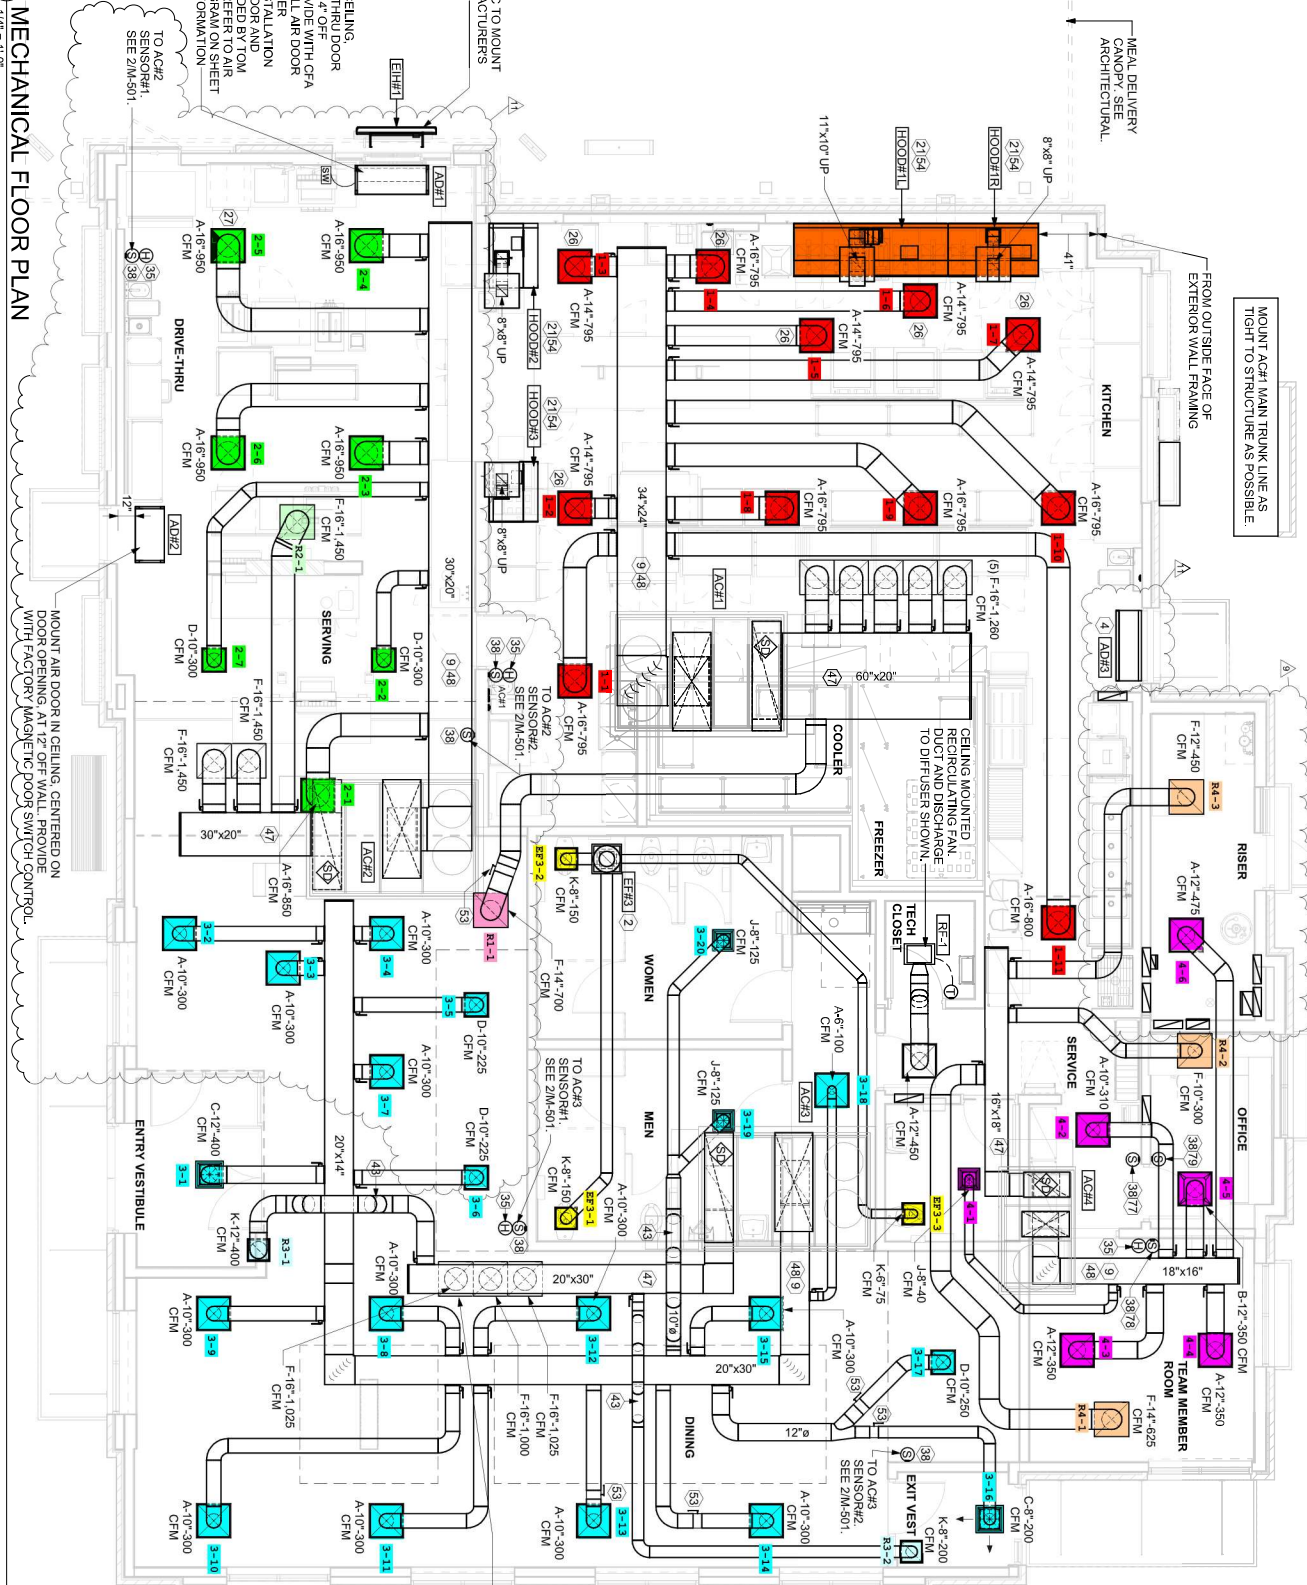

ELECTRIC HEATER, MC TO MOUNT ON WALL PER MANUFACTURERS RECOMMENDATIONS.

MOUNT AIR DOORS IN CEILING, CENTERED ON DRIVE THRU, OR OPENING AT APPROX. 4" OFF EXTERIOR WALL. PROVIDE WITH DIVERTER BOX, INSTALL AIR DOOR AND DIVERTER BOX PER MANUFACTURERS INSTALLATION INSTRUCTIONS. PROVIDE DIVERTER BOX PROVIDED BY TOM BARROW COMPANY. REFER TO AIR CURTAIN WIRING DIAGRAM ON SHEET M-501 FOR WIRING INFORMATION.

MOUNT AIR DOOR IN CEILING, CENTERED ON DRIVE THRU, OR OPENING AT APPROX. 4" OFF EXTERIOR WALL. PROVIDE WITH FACTORY MOUNTED DOOR SWITCH CONTROL.

MOUNT AC#1 MAIN TRUNK LINE AS TIGHT TO STRUCTURE AS POSSIBLE.

SEAL PENETRATIONS IN DRAFT STOPPING CURTAIN AIR TIGHT. SEE ARCH PLANS FOR LOCATION AND METHOD OF DRAFT STOPPING CURTAIN.

BOTTOM DUCT TAKE-OFF DAMPER, TYPE OF 3.