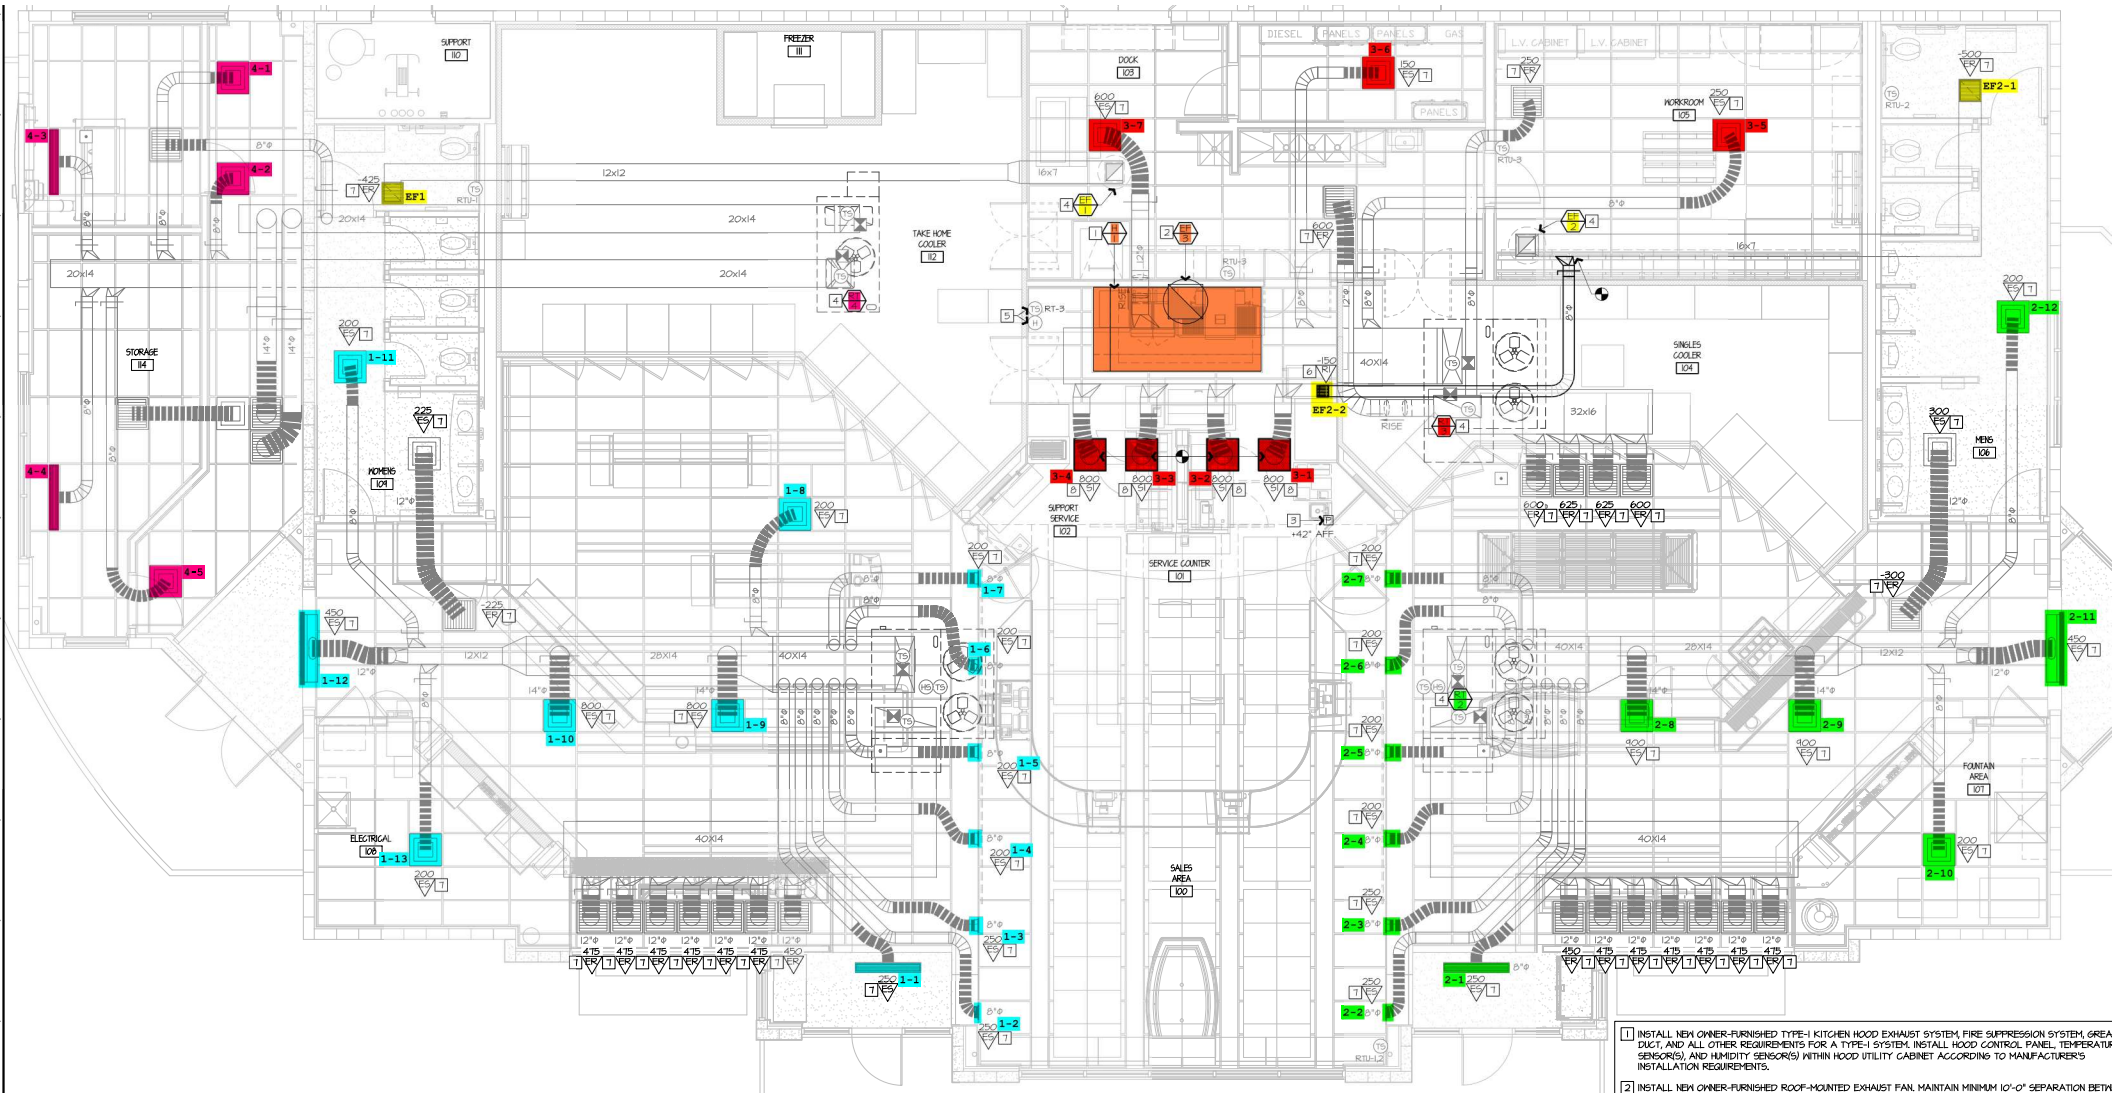

1 INSTALL NEW OWNER-FURNISHED TYPE-I KITCHEN HOOD EXHAUST SYSTEM, FIRE SUPPRESSION SYSTEM, GREA
DUCT, AND ALL OTHER REQUIREMENTS FOR A TYPE-I SYSTEM. INSTALL HOOD CONTROL PANEL, TEMPERATU
SENSOR(S), AND HUMIDITY SENSOR(S) WITHIN HOOD UTILITY CABINET ACCORDING TO MANUFACTURER'S
INSTALLATION REQUIREMENTS.

2 INSTALL NEW OWNER-FURNISHED ROOF-MOUNTED EXHAUST FAN. MAINTAIN MINIMUM 10'-0" SEPARATION BETW