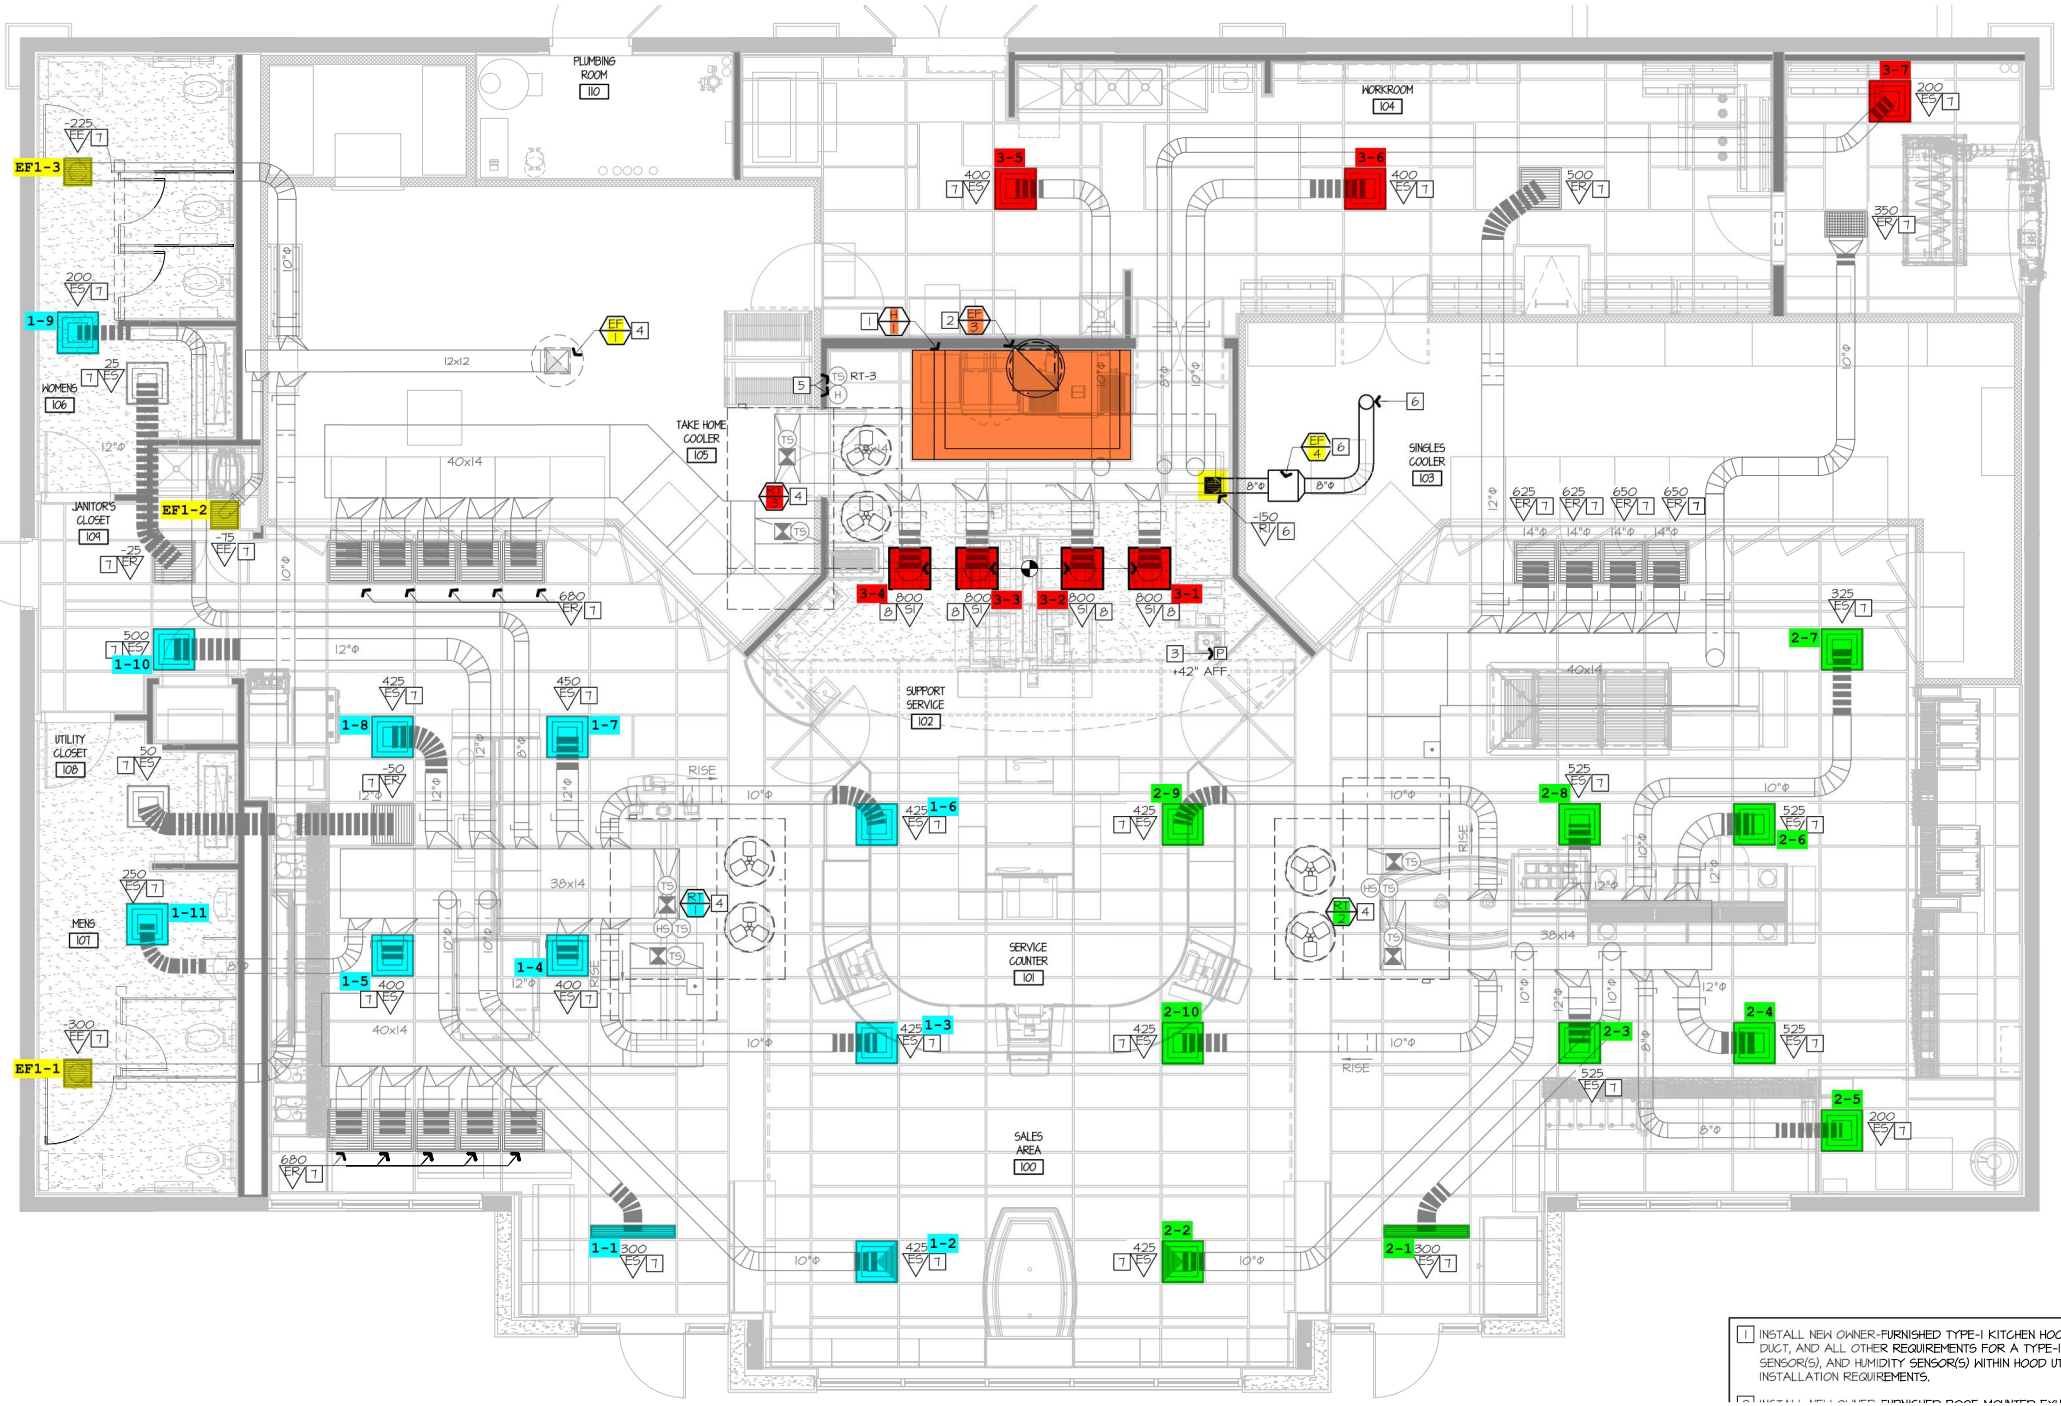

1 INSTALL NEW OWNER-FURNISHED TYPE-I KITCHEN HOOD
DUCT, AND ALL OTHER REQUIREMENTS FOR A TYPE-I S
SENSOR(S), AND HUMIDITY SENSOR(S) WITHIN HOOD UTIL
INSTALLATION REQUIREMENTS.