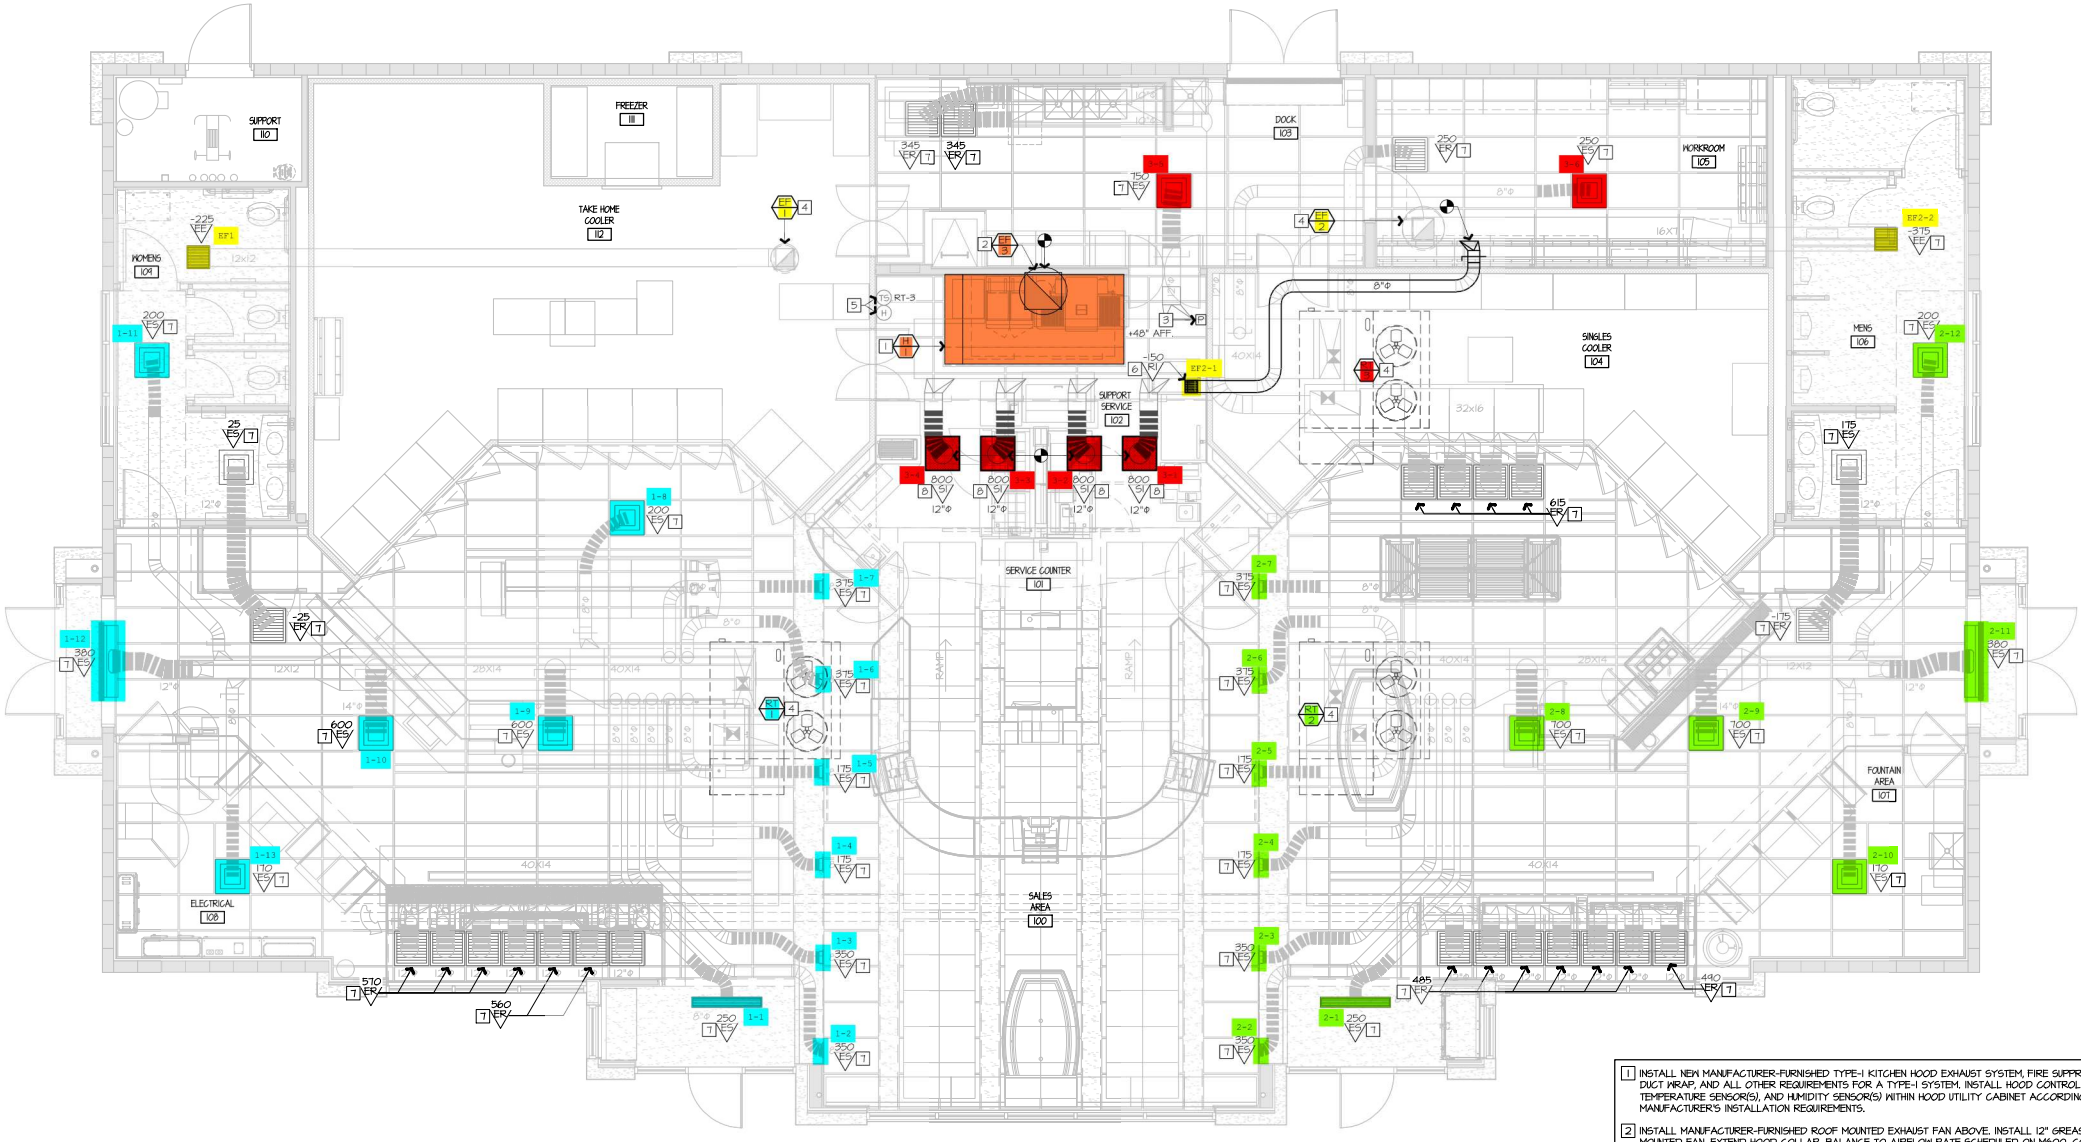

1 INSTALL NEW MANUFACTURER-FURNISHED TYPE-I KITCHEN HOOD EXHAUST SYSTEM, FIRE SUPPR
DUCT WRAP, AND ALL OTHER REQUIREMENTS FOR A TYPE-I SYSTEM. INSTALL HOOD CONTROL
TEMPERATURE SENSOR(S), AND HUMIDITY SENSOR(S) WITHIN HOOD UTILITY CABINET ACCORDING
MANUFACTURER'S INSTALLATION REQUIREMENTS.

2 INSTALL MANUFACTURER-FURNISHED ROOF MOUNTED EXHAUST FAN ABOVE. INSTALL 12" GREAS